

INSTALLATION INSTRUCTIONS & PART DIAGRAM

ELIASON_® *EASY SWING*_® Double Action 3/4" & 1-1/2" Doors STANDARD HARDWARE

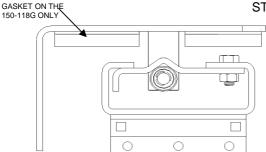


JAMBS MUST BE SQUARE AND PLUMB A MINIMUM OF 3-1/2 INCH WIDE JAMBS REQUIRED TO MOUNT HARDWARE

- Measure width and height of framed opening and compare width dimensions given at time of ordering. (This model was cut to the dimensions given by the customer and is not adaptable to fit into a different size opening.)
- 2. Position bottom pin assembly on floor and center on side jamb. Secure to jamb using (4) 1-1/2" screws supplied. Bottom pin must be secured to floor using (2) 3/8" X 2-1/4" floor anchors supplied. Top pin assembly secures to top with (4) screws and side jamb with (2) screws supplied.
- 3. If a jamb guard is supplied, refer to the installation instructions supplied with the jamb guard.
- 4. Slip door over bottom pin and lift slightly to slide door pod over bearing plate. Line up holes and insert bolts supplied. Partially install lock nuts, move door to closed position and secure lock nuts.
- 5. Install covers and secure (4) 1/2" screws supplied per door.

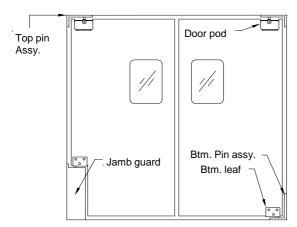

NOTE: Bottom pin assembly must be secured to floor

NOTE: HOLLOW METAL JAMBS DRILL 7/32 PILOT HOLE FOR 9 GA. AND THINNER MATERIAL

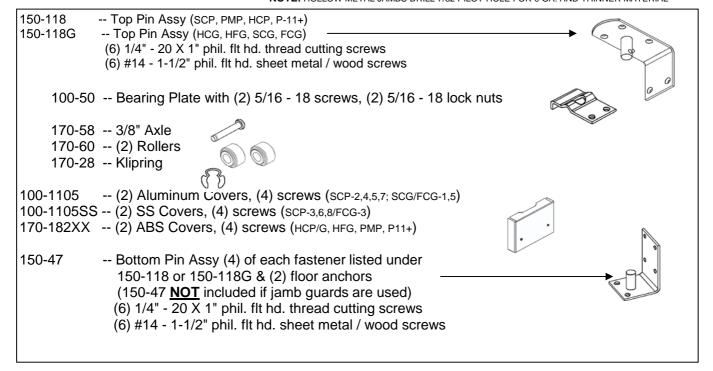



ELIASON CORPORATION www.eliasoncorp.com P.O. Box 2128 Kalamazoo, MI 49003 Telephone: 269-327-7003/800-828-3655

Fax: 269-327-7006/800-828-3577

email: doors@eliasoncorp.com ELIASON CORP. © 2006