

# Cylinder Lock Repair and Replacement

PROTECTIVE GEAR NOTICE	
	<i>Protective Eyewear– Potential risk of eye injuries, protective eyewear required when performing this, and any other associated tasks.</i>
	<i>Protective Gloves– Potential risk of injury to your hands, protective gloves required when performing this, and any other associated tasks.</i>
	<i>Footwear Protective – Potential risk of injury to your feet, wearing protective footwear is required when performing this and any other associated tasks.</i>

## Safety and Warnings



### BEFORE YOU BEGIN

Read instructions completely and carefully.

### WARNING: TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY, OBSERVE THE FOLLOWING:

- 1) Use this unit in the manner intended by the manufacturer.
- 2) Before servicing or altering, switch power off.



For use inside a commercial refrigeration case with packaged foods only.

### FOR YOUR SAFETY


Read and observe all CAUTIONS and WARNINGS shown throughout these instructions. While performing installations described; gloves, safety glasses or goggles should be worn.



### PREPARE ELECTRICAL WIRING

Electrical requirements

This appliance must be supplied with 120V, 60 Hz, and connected to an individual and properly grounded branch circuit, protected by a 15 or 20 ampere circuit breaker or time delay fuse.

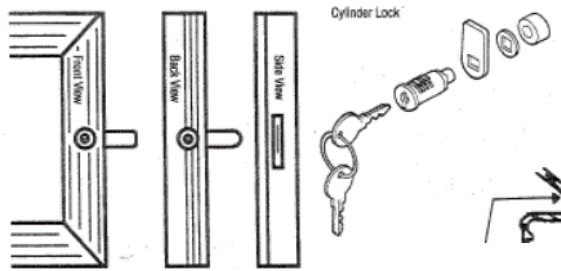

1. Remove gasket from door rail containing the lock (leaving the gasket on the remaining door rail assembly for easy reassembly).
2. Remove plastic cover from the door rail containing the lock assembly to expose access to the lock mount.
3. Insert a phillips-head screwdriver into the lock access in the back of the door rail.
- NOTE: Once the lock screw has been removed, the screw washers and lock latch will come loose. Be certain that these components are secure prior to the removal of the lock screw, or they may become lost if dropped inside of the door rail.**
4. Turn the lock screw counter-clockwise to loosen the screw.
5. Carefully remove the screw, lock washers and lock strike from the back of the lock assembly.
6. If necessary, replace the strike.
7. Remove the lock assembly, out from the lock housing and through the front of the door rail.
8. Replace lock assembly into housing inside rail.
9. Replace the strike washer, strike, lock washer and screw to the rear of the lock assembly and assemble in the correct order. Be certain that the strike is fully and correctly seated onto the end of the cylinder.
10. Turn lock screw clockwise to catch the threads and tighten the screw completely. **DO NOT OVER-TIGHTEN.**
11. Test lock and confirm that it works properly.
12. Reassemble the plastic cover and gasket.

**Revisions**

<b>Rev.</b>	<b>Description</b>	<b>Date</b>	<b>Orig.</b>	<b>Inc.</b>	<b>Chk.</b>
A	ECN1024569	10/21/2024	HT		