

Screen-Pro Door Measurement Guide



Order # _____

Door # _____

Company Name: _____

order-desk@tmi-pvc.com

WWW.CHASEDOORS.COM | 800.543.4455 |

PART ONE (ALL DOOR STYLES)

MOUNTING STYLE:

- ☐ In-Jamb (Requires 8.5" of jamb depth)
- ☐ Face of Wall (Requires 6.5" on each side and 9" of header room)
 - ☐ Interior Wall
 - ☐ Exterior Wall
- ☐ Inside Stand-Off (Please specify type of existing door)
 - ☐ Coiling Below Box Above Opening
 - ☐ Coiling in Front of Box Above Opening
 - ☐ Coiling Below Box Within Opening
 - ☐ Full Vertical Lift
 - ☐ High Lift
 - ☐ Low Headroom or Standard Lift
 - ☐ Vertical Lift Sits Above Opening of Existing Door
 - ☐ Vertical Lift Sits in Opening of Existing Door

Door Operator

- ☐ Spring Loaded
- ☐ Chain Hoist Manual
- ☐ In-Tube Motorized (12" per second)
- ☐ External Motor
 - ☐ 4000 Series (Pro-LH, Medium Duty)
 - ☐ 5000 Series (Pro-H, continuous duty)
 - ☐ 6000 Series (Rapido, 30" per second)

Color of Screen (Choose One)

Stock Color Options:

☐ Blue ☐ Yellow ☐ Red ☐ Black

Optional Colors:

☐ Green ☐ Gray ☐ Almond

Stock Keder Options:

☐ Yellow ☐ Black ☐ Red ☐ White


Part Three: Inside Stand-off Mount Only – Fill In Dimensions



Please Provide Measurement from the Jamb to the Outside of the Track (A) and the Width of the Existing Door Guide Tracks (B).

A: _____

B: _____

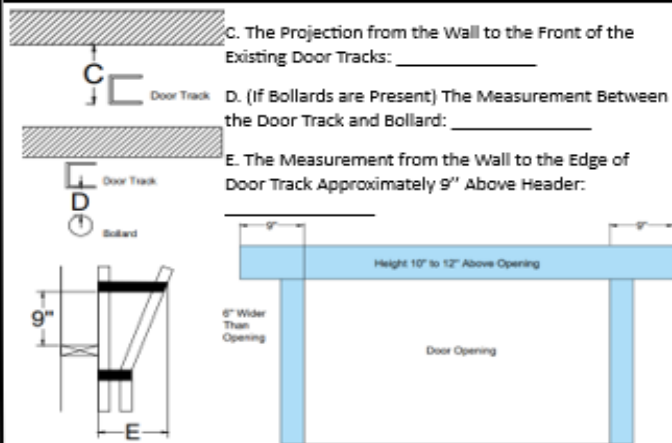


The Illustration Above Shows the Areas That Need to be Free from Any Obstacles to Allow the Door to Operate Properly. If there are any obstructions in these areas, they must be removed.

Important Product and Application Notes:

- A. Each wind stiffener will have yellow accent safety stripes, and spring loaded doors will include yellow safety pull down straps.
- B. Please check for wind and negative pressure – If medium to high winds or negative pressure is present, consider upgrading to our high-wind package that includes an extra panel and stiffener.
- C. If your door is being installed on a corrugated building, you may need additional mounting reinforcements (supplied by others).
- D. Inside stand off mounted doors do not include a method of sealing an open gap that may exist between the wall and your existing door. Please ask your local installer to supply brush or weather seal if required.
- E. When used as a vinyl-pro, these doors are designed to be a barrier against bugs, birds, temperature, and other elements in interior environments. They do not carry a wind load rating. If mounted outside, use discretion and make sure the existing sectional or rolling steel door is close and the roll-up door is up during windy conditions.
- F. Any variations to the door size from what was quoted may change the price of the door.

Application Notes: _____

Part Two: Fill in Door Measurements (All Mount Styles)

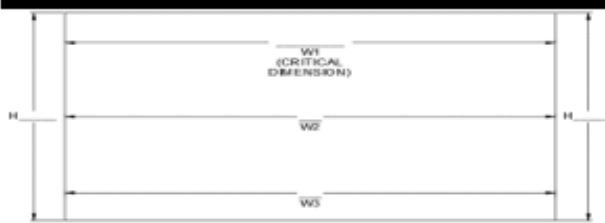

Please Provide Measurements of Height and the Width (in inches) at the Top, Center, and Bottom of the Actual Opening.

If Your Door is in Jamb or Face of Wall Mounted, Please Proceed to Signature.

If Your Door is Inside Standoff Mounted, Please Proceed to Part 3.

This door measurement guide needs to be filled out completely before the order can be entered. Charges will be assumed by the buyer for changes or cancellations to work in progress. Buyer hereby accepts responsibility for all sizes, dimensions, and door options specified above. **This order will not be processed until door measurement guide is signed and submitted.**

Specification Accepted By: _____

Date: _____



TMI Corporation